


## Dimensional Drawings

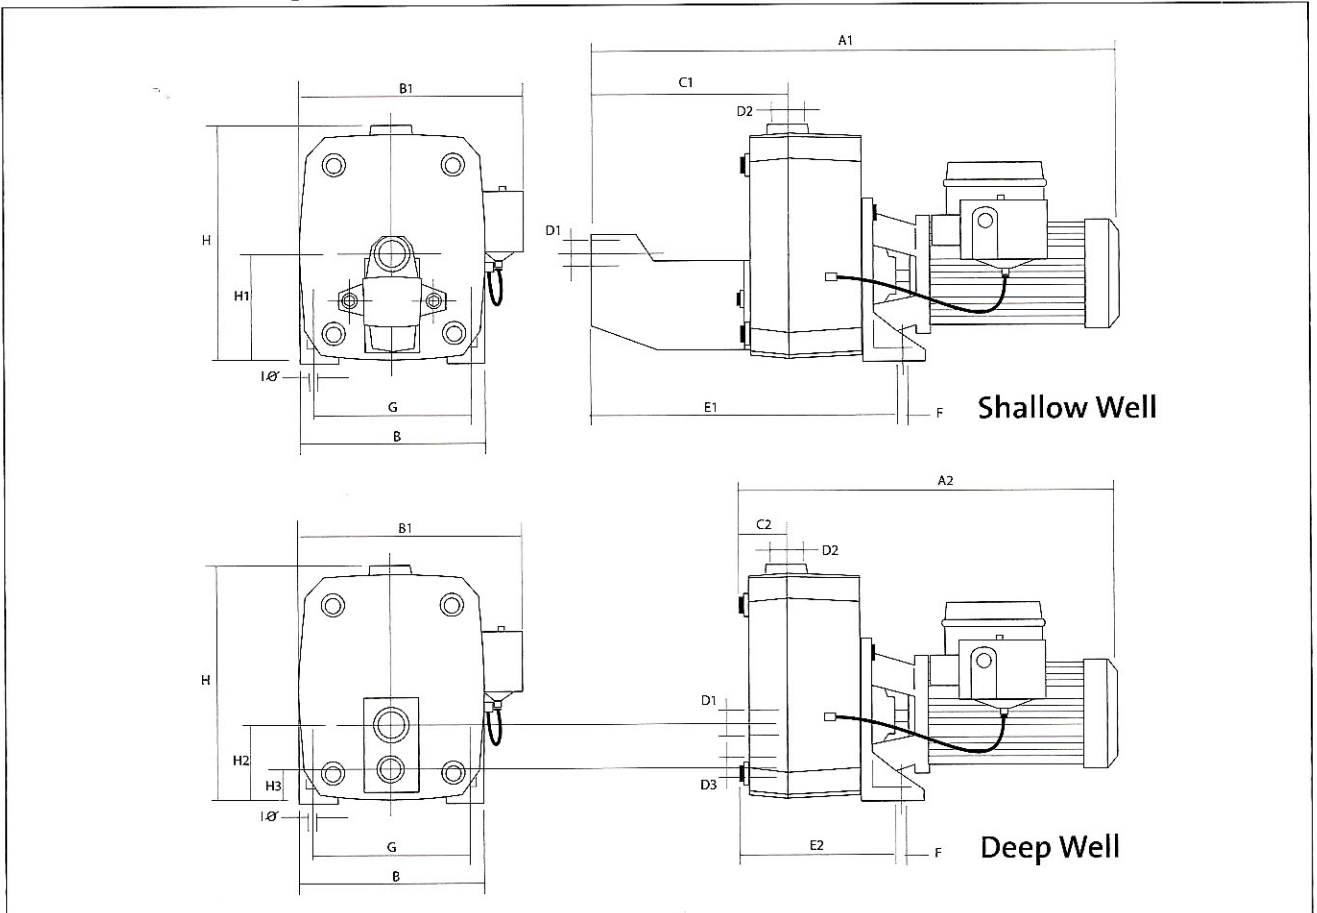

## Dimensions and Weights

Pump Type	Motor Data				D1 Suction NPT	D2 Disch. NPT	D3 Re-turn NPT	Dimensions (inches)														Ship Wt. (lbs)	Ship Vol. (Cu Ft.)	
	HP	S.F.	PH	Volts				A1	A2	B	B1	C1	C2	E1	E2	F	G	H	H1	H2	H3			Ø
JPF5A	1.5	1.3	1	230	1-1/4"	1"	1"	22.0	15.3	8.3	11.0	8.7	2.0	13.8	7.8	0.78	5.7	10.0	6.2	4.3	2.1	0.44	70	1.9
JPF7A	2	1.2	1	230	1-1/4"	1"	1"	25.6	19.9	8.3	12.4	8.7	2.0	13.8	7.8	0.78	5.7	10.0	6.2	4.3	2.1	0.44	73	2.5

## Conversion Instructions from Shallow Well to DeepWell\*

Remove bolts and detach ejector nose from convertible jet pump. Connect suction (D1) and pressure (D3) port to deep well ejector.

\* Requires separate ejector to suit specific suction lift needs.

